

# Rhythm & Rug Set - Bluetooth Speakers

## User Guide

### Speaker Components


- 2x Wireless speakers
- Type-C USB charging cable
- 2x Removable stakes
- AUX cable
- User Guide

### Product Specifications

- Bluetooth version: 5.3
- Operating range: 10 metres
- Channel: Double
- Impedence: 4Ω
- Output power: 2x 5W
- SNR: ≥80dB
- Solar panel charge: 130mA Max
- Audio: MP3
- Battery capacity: 2000mAh
- Play time: up to 6 hours
- Material: ABS

### Buttons & Functions

- |                         |                       |
|-------------------------|-----------------------|
| 1. Solar panel          | 6. On/Off (Power)     |
| 2. Mode                 | 7. AUX port           |
| 3. Volume up/next       | 8. TF (Micro SD) card |
| 4. Volume down/previous | 9. DC 5V in-port      |
| 5. TWS                  | 10. Stake             |

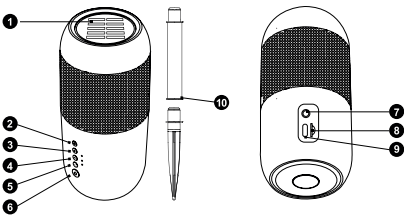

### Battery Information

Your speakers are powered by rechargeable batteries. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger that is damaged to charge the speaker. Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose batteries according to local regulations. Please do not discard this rechargeable battery as trash. Consult your local waste collection agency for proper disposal or recycling methods.

**Please read these instructions carefully before using your wireless speakers. Keep these instructions for future reference.**

Your wireless speakers have an internal rechargeable battery. Improper usage may result in the wireless speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:

1. Do not disassemble, throw away or damage the wireless speaker.
2. Store the wireless speakers in a dry place, keeping it away from damp corrosive materials and environments.
3. Keep the wireless speakers away from direct sunlight, fire and high voltage equipment. Do not store the wireless speakers inside a car during hot weather. Remember a closed car acts like a greenhouse allowing the inside temperature to possibly reach over 90°C (200°F).
4. These wireless speakers are not toys. Please keep them out of reach of young children.
5. Please do not discard the wireless speakers. Consult your local waste collection agency for proper disposal or recycling methods.

### Charging the Batteries

1. Plug the charger cable into the speaker.
2. Connect the charger to a USB power source. The red LED indicator light will display during charging. If charging does not start, disconnect the charger, plug it in again and retry. Charging the battery fully may take up to 4.5 hours.
3. When the battery is fully charged, the red LED indicator light will turn off and the green LED indicator light will turn on. Disconnect the charger from the USB power source and the speaker. The fully charged battery has power for up to 6 hours of music time or up to 100 hours of standby time. However, the talk and standby times may vary when used with different devices, settings and environments.

### INSTRUCTIONS

#### Key functions

1. To turn on the speaker, press the power button for four seconds. The LED indicator light will flash blue alternatively. On your Bluetooth-enabled device navigate to the Bluetooth settings. Turn on the Bluetooth feature and search for new devices. After a few seconds you will see it's pairing name listed as RRSPEAKER.
2. Tap the display name to select it. The speaker will have a chime sound and the blue LED indicator light will flash slowly when it is successfully paired with your device. These devices will remain paired and automatically connect to one another whenever they are in range and both active. Most devices will not ask for a password, but if one is requested use '0000'.
3. To turn off the speaker, press and hold the power button.
4. Press the power button to play/pause your device.
5. If no device is paired successfully, the speaker will be turned off automatically in approximately five minutes.
6. Long press the " - " button to turn the volume down or short press this button to go to the previous song.
7. Long press the " + " button to turn the volume up or short press this button to go to the next song.

#### Answer/End Calls

Answer a call: short press the power button to pick up the call and press it again to end a call.

Reject a call: Press the power button for two seconds.

Redial a call: Press the power button twice to re-dial the last number you called.

#### Solar Charging

Put this speaker under sun light, it will be charged automatically, but please note: This solar panel charge will be 130mA MAX, so it is ONLY a supplementary charging function.

#### Mode Switching

1. Default mode is Bluetooth mode;
2. Short press the " M " button to switch between Bluetooth and other mode.

#### FM Radio Mode

Plug in the Type-C USB cable into the Type-C USB port as an antenna, short press the " M " button to go to FM Radio mode. When in the FM Radio mode, short press the power button to search an available station. Press the " + " or " - " button to go to the next frequency.

#### AUX Input

After inserting a 3.5mm AUX cable into the external audio input, your speaker will automatically enter the AUX mode. Press and hold the " + " or " - " buttons to adjust the volume, press the power button to mute the sound on your speaker.

#### TWS Function (Pairing Speakers)

Turn on both speakers you would like to pair via TWS. (Note: Do not use your mobile phone to connect to the Bluetooth speakers until the two speakers are paired). Short press the " > < " (TWS) button on both speakers which will each make a short beep, then wait until you hear the paired confirmation tone. Once the speakers are paired, connect your Bluetooth device to one of the speakers following the instructions above. If paired correctly, your Bluetooth device should play simultaneously on both speakers at the same time.